



# Registering your new keyfob




## Old style Keyfob with hidden button on reverse

## New style Keyfob with no hidden button


### A Keyfob that is already working

### A Keyfob that is already working


Take your existing transmitter and press the hidden button within the hole at the back of the casing as shown.

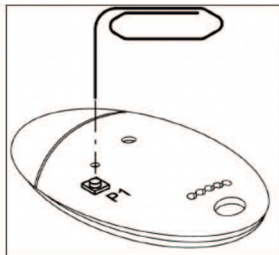

Take your existing transmitter and press the two buttons on the front of the keyfob as shown.

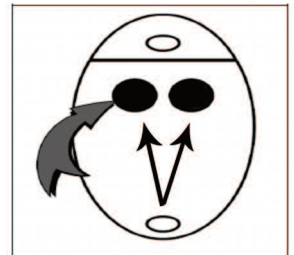

Then press the button on the front that operates your gate or door. Gate should not move.

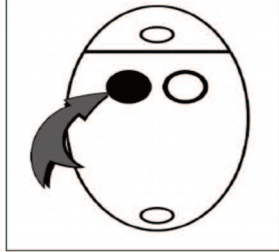

Then press the button on the front that operates your gate or door. Gate should not move.



You must be within 5 Metres of the gate

You must be within 5 Metres of the gate


### B New Keyfob

### B New Keyfob


When you have carried out the instructions in 'A' above...

When you have carried out the instructions in 'A' above...


Take the new transmitter and press the hidden button within the hole at the back of the casing as shown.

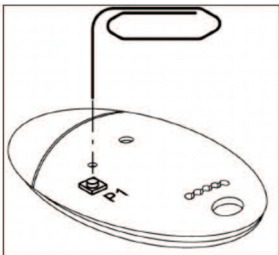


Take your existing transmitter and press the two buttons on the front of the keyfob as shown.

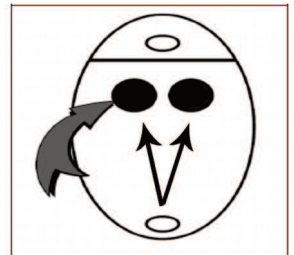

Then press the button on the front that you wish to operate your gate or door.

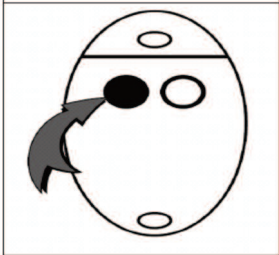

Then press the button on the front that you wish to operate your gate or door.

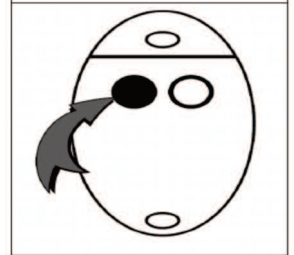

Wait 10 seconds and your new transmitter will be ready to use.

Wait 10 seconds and your new transmitter will be ready to use.

'B' must be carried out within 10 seconds of 'A'

'B' must be carried out within 10 seconds of 'A'



Fig. B

